

# evoluzione cyclesports

installation instructions

## street airflow system for 2006 bmw k1200r

part number 76014

©2007 by evoluzione.net, inc.

this **evoluzione cyclesports street airflow system** has been designed to add horse power and torque by removing the restrictive factory air tube and replacing it with a cleanable high flow air filter.

### introduction

this **evoluzione cyclesports race airflow system** is easy to install by carefully following the instructions. read all instructions first to familiarize yourself with the parts and procedures.

### installation

**step 1.** using a torx t-25 tool, remove the three screws holding the battery cover. remove the battery cover.

**step 2.** using a torx t-30 tool, remove the right turn signal.

**step 3.** using a torx t-25 tool, remove the screw holding the right air intake cover. carefully slide the right air intake cover forward and remove.

**step 4.** remove the screw holding

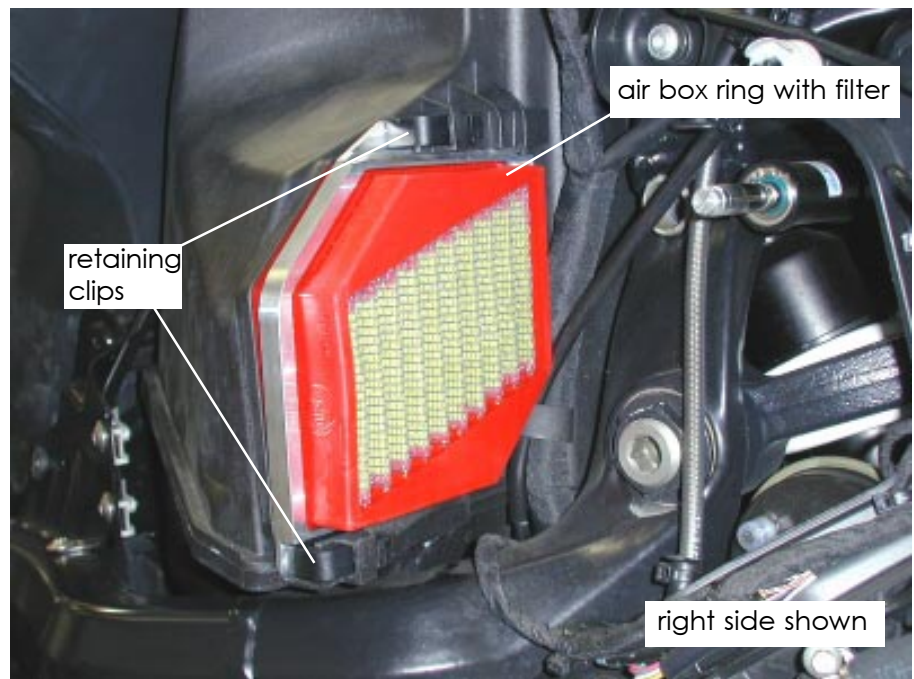


photo one

the right side panel. remove the retaining clip on the backside. remove the right side panel by pulling it out gently.

**step 5.** remove the four screws holding the right tank cover. dis-

engage the guide pins and remove the tank cover by pulling back and up.

**step 6.** remove the two retaining clips holding the right intake air pipe. remove the intake air pipe

38580 celine cove, suite "b"  
murrieta, california 92562

phone: 951.639.0951  
fax: 951.639.3022

july 2007, revision 02

from the holder at the intake air silencer and from the rubber grommet.

**step 7.** install the supplied air filter into the right side air box ring. install the ring with filter into the holder at the intake air silencer and insert the two retaining clips removed earlier to hold it in place (see photo one).

**step 8.** install the right tank cover

by engaging the guide pins and reinstalling the four screws.

**step 9.** install the right side panel by lubricating the pin on the back-side and pushing in. install the back-side retaining clip and the screw.

**step 10.** slide in the right air intake cover and reinstall the screw.

**step 11.** install the right turn signal.

**step 12.** reinstall the battery cover and the three screws.

#### parts list

billet air box ring  
high flow air filter

#### tools required

torx t-25  
torx t-30