

evoluzione cyclesports

installation instructions

license plate relocater for mv agusta f4

part number 92021

©2006 by evoluzione.net, inc.

this **evoluzione cyclesports license plate relocater** is designed to be a lightweight, simple addition to help clean up the tail end look on the mv agusta f4. the relocater bracket is made from 5052-h32 aluminium and is anodized for long life. **note: due to the repositioning of the turn signals, this kit may not be legal for street use - please check local laws first.**

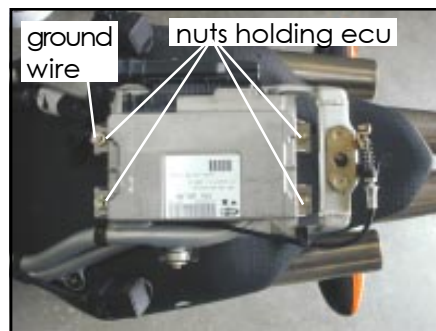


photo one

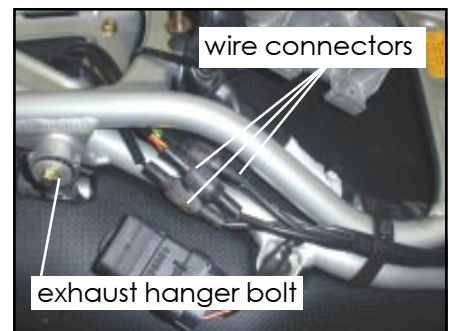


photo two

introduction

the **evoluzione cyclesports license plate relocater** is easy to install by carefully following the instructions. read all instructions first to familiarize yourself with the parts and procedures.

installation

caution: It is suggested that the bike be allowed to cool off for a few hours to avoid burns from hot exhaust and parts.

step 1. lift the seat. using a 10mm socket and ratchet, remove the four nuts holding the ecu and

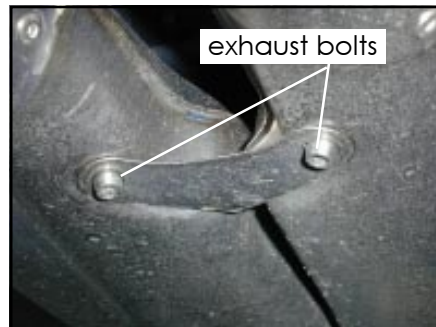


photo three

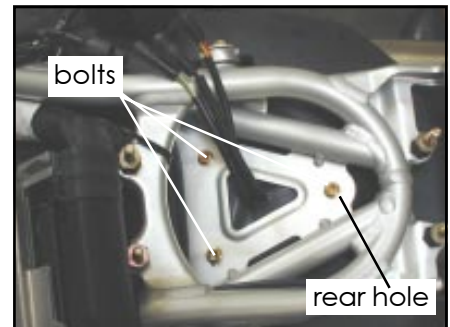


photo four

ground wire. lift out the ecu and set it to the side (please see photo one).

step 2. locate the wiring harness at the right side of the seat tray. note

the wire connections to the left turnsignal, right turnsignal and license plate light. carefully disconnect all three connectors (please see photo two).

38580 celine cove, suite "b"
murrieta, california 92562

phone: 951.639.0951
fax: 951.639.3022

october 2006, revision 01

step 3. loosen but don't remove the right side exhaust hanger bolt (please see photo two).

step 4. remove one of the two exhaust bolts holding the two mufflers together from underneath the exhaust (please see photo three).

step 5. using an 8mm socket and ratchet, remove the three bolts holding the subfender to the underseat tray (please see photo four). carefully feed the wires through the underseat tray and fully remove the subfender by sliding it back between the exhaust.

step 6. reinstall the exhaust bolt holding the two mufflers together and retighten the right side exhaust hanger bolt.

step 7. cut the tie wrap holding the turn signal and license plate light wires together.

step 8. using an 8mm socket and ratchet, remove both turnsignals from the subfender (note left and right for reassembly).

step 9. feed the turnsignal wires through the larger holes on the sides of the supplied relocater bracket and reattach the turnsignals using the upper slot holes, noting left and right.

step 10. if you wish to install the license plate light proceed to step 14.

without light

step 11. install one of the supplied 1/4-20 x 1/2" pan head bolt through the license plate bracket and screw it into the supplied black aluminum tube and tighten (please see photo six).

step 12. using the supplied tie wrap, neatly wrap the wires onto the black aluminum tube.

step 13. install the other 1/4-20 x 1/2" pan head bolt through the supplied washer then through the rear hole (shown in photo four). from underneath, screw the bolt into the other end of the black aluminum tube and tighten. skip to step 18.

with light

step 14. using an 8mm socket and ratchet, remove the license plate light assembly from the subfender.

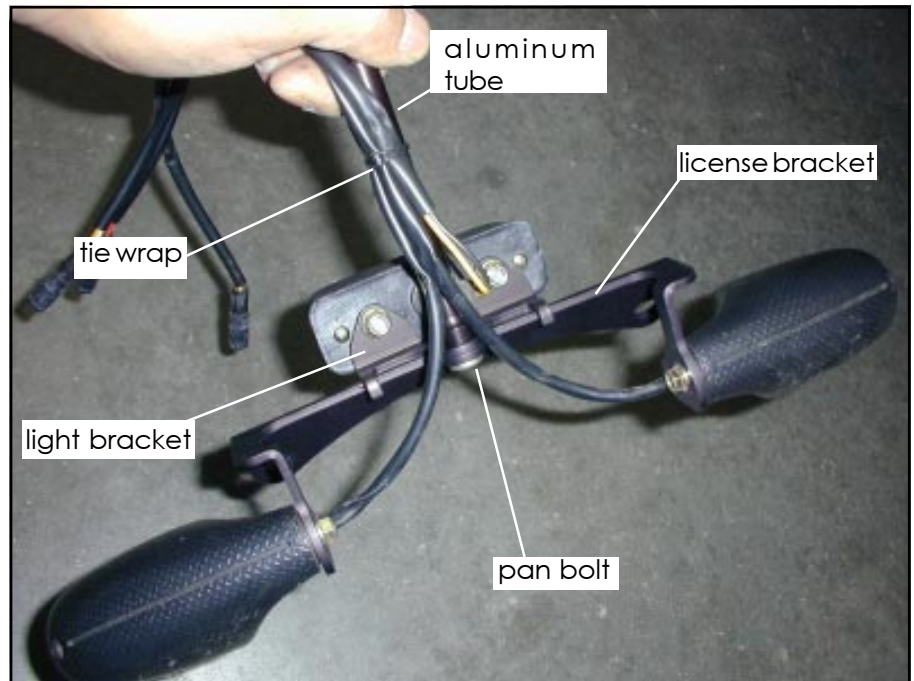


photo six

install the assembly onto the supplied light bracket (please see photo five).

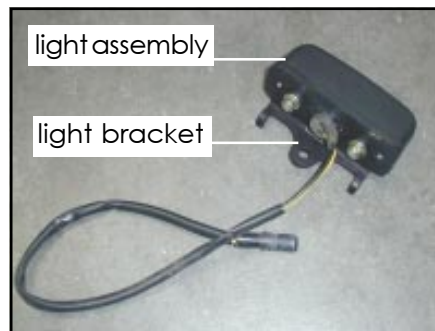


photo five

step 15. install one of the supplied 1/4-20 x 1/2" pan head bolt through the license plate bracket then through the light bracket and screw it into the supplied black aluminum tube and tighten (please see photo six).

step 16. using the supplied tie wrap, neatly wrap the wires onto the black aluminum tube.

step 17. install the supplied 1/4-20 x 1 1/2" pan head bolt through the supplied washer then through the rear hole (shown in photo four). from underneath, slide the supplied aluminum spacer on the bolt and screw the bolt into the other end of the black aluminum tube

and tighten.

step 18. route the turnsignal wires through the pass-through hole in the underseat tray and out of the way from the exhaust. reconnect the turnsignals and license plate light wires.

step 19. reinstall the ecu with the ground wire.

step 20. turn the key to "on" and check that the turnsignals and license plate light function correctly.

step 21. lower seat and install the license plate.

parts list

aluminum relocater bracket
aluminum light bracket
aluminum black tube
aluminum spacer
washer
1/4-20x1/2 pan head bolt (2)
1/4-20x1 1/2 pan head bolt
tie wrap

tools required

8mm & 10mm socket & drive
5mm allen wrench