

installation instructions

billet torque arm & shim kit for 2005/2007 bmw k1200s/r & 2006/2007 bmw k1200gt

part number 96062/96063

©2006 by evoluzione.net, inc.

this **evoluzione cyclesports billet torque arm & shim kit** replaces the stamped steel factory piece for a much more finished look. this torque arm comes set to the factory length but with the supplied shims, it can be adjusted to provide much sharper turn-in and increase ground clearance for more lean angle.

introduction

the **evoluzione cyclesports billet torque arm shim kit** is easy to install by carefully following the instructions. [read all instructions first to familiarize yourself with the parts and procedures.](#)

installation for shims

step 1. remove the torque arm from the bike.

step 2. using a 10mm allen, remove the bolt and washer from one end section of the torque arm (please see photo one).

step 3. carefully remove the end section from the bar. position a shim inside the end section (please see photo two).

note: shims are approximately 3mm thick. when installing the shims, install one at a time per side. (if installing two shims, install one on one end and the other on the other end).

step 4. lubricate the o-ring and insert the bar into the end section being careful not to damage the o-ring.

step 5. reinstall the washer and bolt with a drop of red threadlocker and tighten. when tightening make sure that both end sections are flat and flat head holes are facing the same way.

step 6. repeat steps 2 through 4 on the other end section if more than one shim is being installed.

step 7. reinstall the torque arm onto the bike and tighten the bolts.

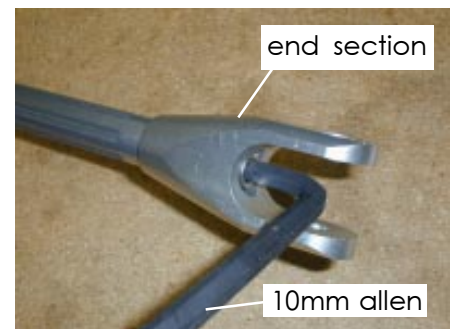


photo one

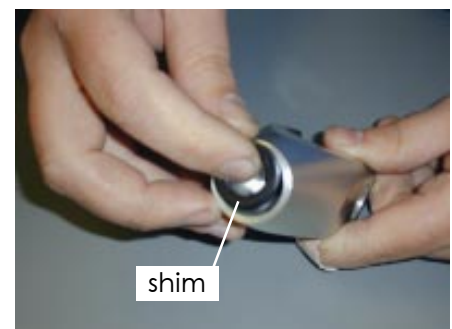


photo two

tools required

10mm & 6mm allen
17mm wrench
red threadlocker

parts list

billet torque arm
shims (5)