

# evoluzione cyclesports

installation instructions

## license plate relocater for can-am spyder

part number 98021

©2008, 2007 by evoluzione.net, inc.

this **evoluzione cyclesports license plate relocater** is designed to be a lightweight, simple addition to help clean up the tail end look on the can-am spyder. the relocater bracket is made from anodized 5052-h32 aluminium for long life and light weight.

### introduction

the **evoluzione cyclesports license plate relocater** is easy to install by carefully following the instructions. [read all instructions first to familiarize yourself with the parts and procedures.](#)

### installation

caution: It is suggested that the bike be allowed to cool off for a few hours to avoid burns from hot exhaust and parts.

**step 1.** using a 10mm socket, remove the plastic cable guide on the right side swingarm (note routing of cables for reinstallation).

**step 2.** using a t-30 torx wrench, remove the seven bolts holding the underseat panel. set the underseat panel aside for later

modification.

**step 3.** follow the license plate light wires to the two-wire connector under the seat. unplug the connector.

**step 4.** using a t-30 torx wrench & 10mm wrench, remove the three bolts holding the left fender bracket and lower belt guard to the swingarm.

**step 5.** using a t-30 torx wrench & 10mm wrench, remove the three bolts holding the right fender bracket to the swingarm. carefully remove the rear fender from the swingarm and set aside.

**step 6.** reinstall the plastic cable guide removed in step 1.

**step 7.** reinstall the lower belt guard on the left side swingarm using the factory bolts and nuts. install the two (2) supplied 6mm thick standoffs between the belt guard and swingarm on the upper two bolt mounts.

**step 8.** place the supplied template (please see page two) on the underseat panel and drill two 6mm (1/4") holes and one 10mm (13/32") hole.

**step 9.** install the supplied metal collar (through the 10mm hole)

from underneath and secure with the lock washer and nut using 1/2" wrench. install the bulb into the bulb holder and thread the assembly into the collar (from the top). thread the clear lens into the collar from underneath.

**step 10.** install a supplied washer on each of the supplied bolts. insert the bolts through the two end holes of the bracket (from the bottom). install a supplied 10mm thick standoff onto each bolt. from the underside of the underseat panel, thread the bolts through the 6mm holes drilled in step 8. install another supplied washer and locknut onto each bolt. tighten the locknuts.

**step 11.** plug the wire harness into the two-wire connector from step 3.

**step 12.** reinstall the underseat panel using the seven factory bolts.


**step 13.** remove your license plate from the stock bracket and install onto the new bracket.

**step 14.** turn the key to "on" and check that the license plate light functions correctly.

38580 celine cove, suite "b"  
murrieta, california 92562

phone: 951.639.0951  
fax: 951.639.3022

january 2008, revision 01

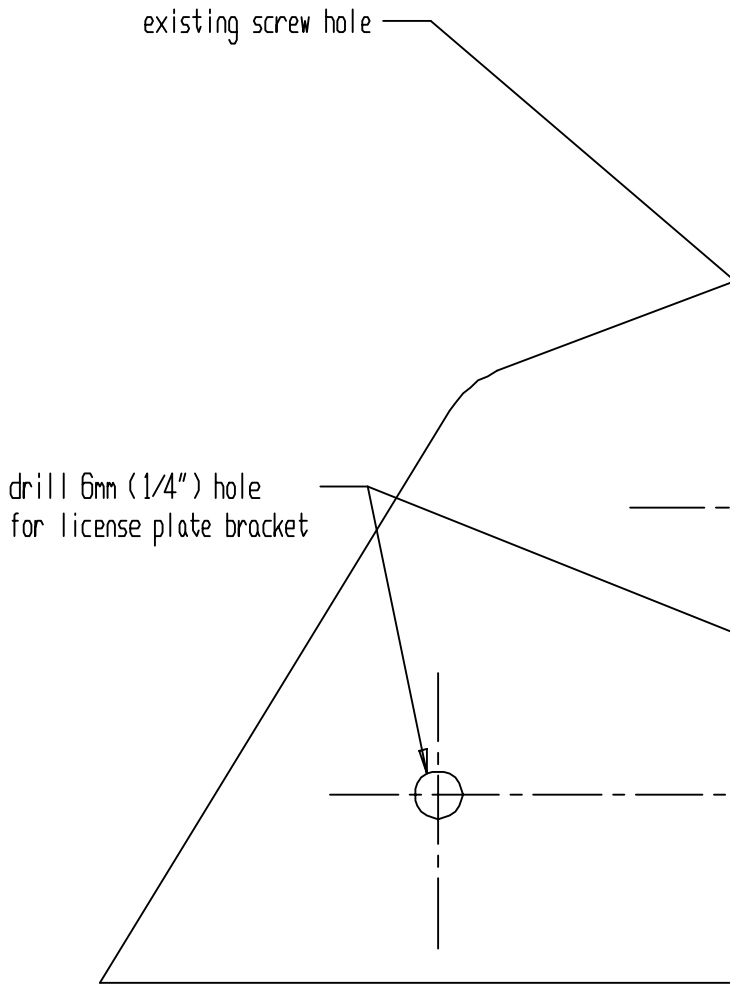

**parts list**

relocator bracket  
 6mm standoff (2)  
 10mm standoff (2)  
 bolt (2)  
 washers (4)  
 locknut (2)  
 collar with nut/washer  
 bulb holder w/ harness  
 bulb  
 clear lens

**tools required**

10mm socket & driver  
 t-30 torx wrench  
 10mm wrench  
 5mm allen wrench  
 1/2" wrench  
 1/4" & 13/32" drill bits & drill